

PCIE mini Backplane

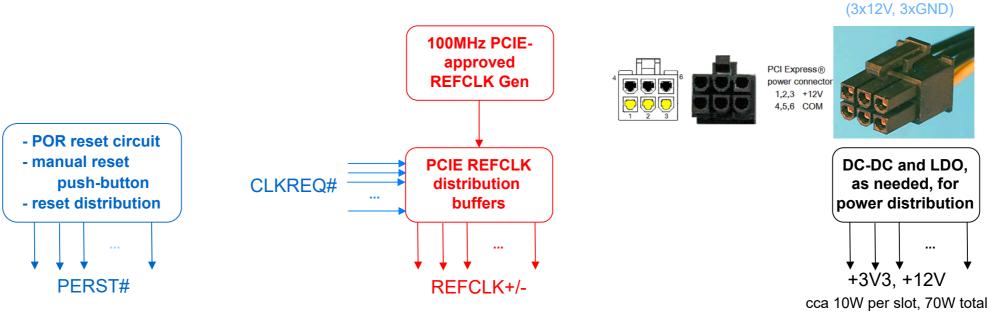

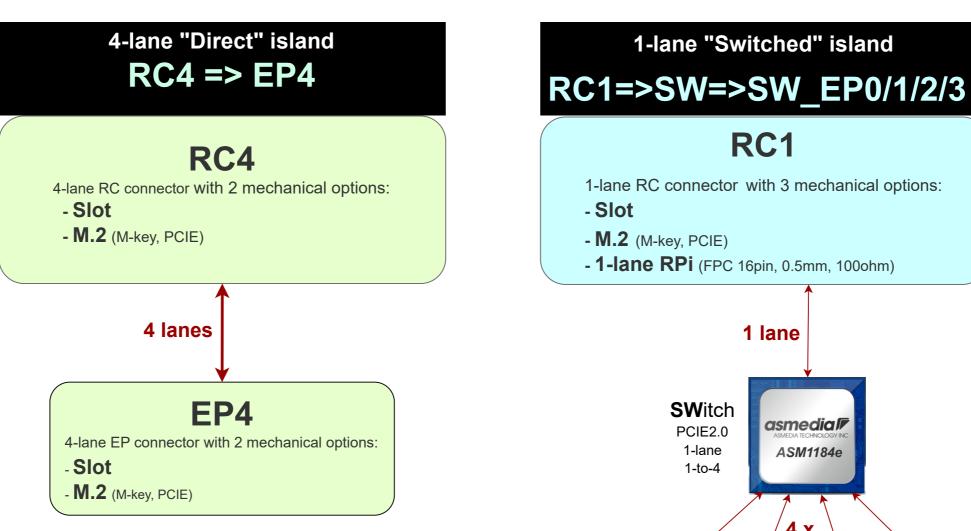


The "RC Connectors" are for the plug-in cards that are natively EP. It is the job of the backplane to swap the connector pins so that the Tx diff.pair on one side of the link is connected to the Rx diff.pair on the other side, and vice-versa. This allows the same FPGA plug-in card, which is always pined out to serve as an EP, to be used in both EP and RC roles.

1-lane RC connector with 3 mechanical options: - **1-lane RPi** (FPC 16pin, 0.5mm, 100ohm) asmedia ASM1184e 4 x 1 lane 1-lane EP 1-lane EP 1-lane EP 1-lane EP connector connector connector connector - Slot - Slot - Slot M.2 (PCIE) - M.2 (PCIE) - M.2 (PCIE) - M.2 (PCIE) SW_EP1 SW_EP2 SW_EP3 SW_EP0

6-pin PCIE **Power connector**

General PCIE topology

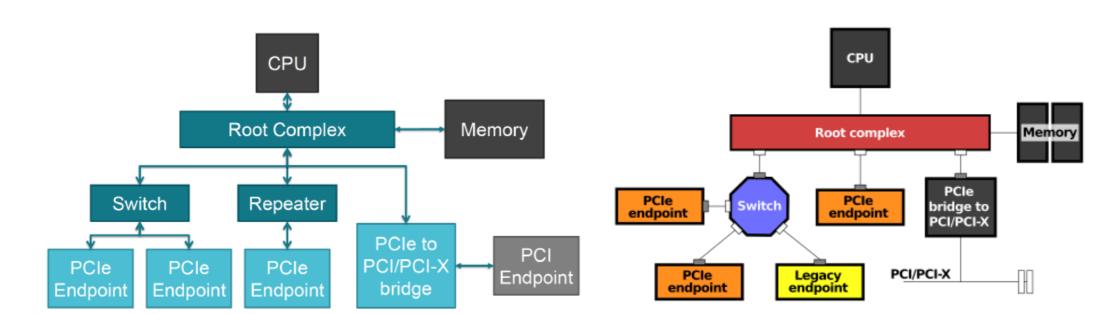

PCIEx1 pinout

Pin	Side B	Side A	Description	
1	+12 V	PRONT1#	Must connect to farthest PRSNT2# pin	
2	+12 V	+12 V	Main power pins	
3	+12 V	+12 V		
4	Ground	Ground		
5	OMOLK	TOK	SMBus and JTAG port pins	
6	- CMDAT	TDI		
7	Ground	TD0		
8	+3.3 V	TMO		
9	TROT#	+3.3 V		
10	+3.3 V aux	+3.3 V	Aux power & Standby power	
11	WAKE!	PERST#	Link reactivation; fundamental reset [25]	
Key notch				
12 (CLKREQ#[26]	Ground	Clock Request Signal	
13	Ground	REFCLK+	Reference clock differential pair	
14	HSOp(0)	REFCLK-	Lane 0 transmit data, + and -	
15	HSOn(0)	Ground		
16	Ground	HSIp(0)	Lane 0 receive data, + and -	
17	PRONT2#	HSIn(0)		
18	Ground	Ground		
PCI Express x1 cards end at pin 18				

Legend			
Ground pin	Zero volt reference		
Power pin	Supplies power to the PCle card		
Card-to-host pin	Signal from the card to the motherboard		
Host-to-card pin	Signal from the motherboard to the card		
Open drain	May be pulled low or sensed by multiple cards		
Sense pin	Tied together on card		
Reserved	Not presently used, do not connect		